Miele

Operating instructions

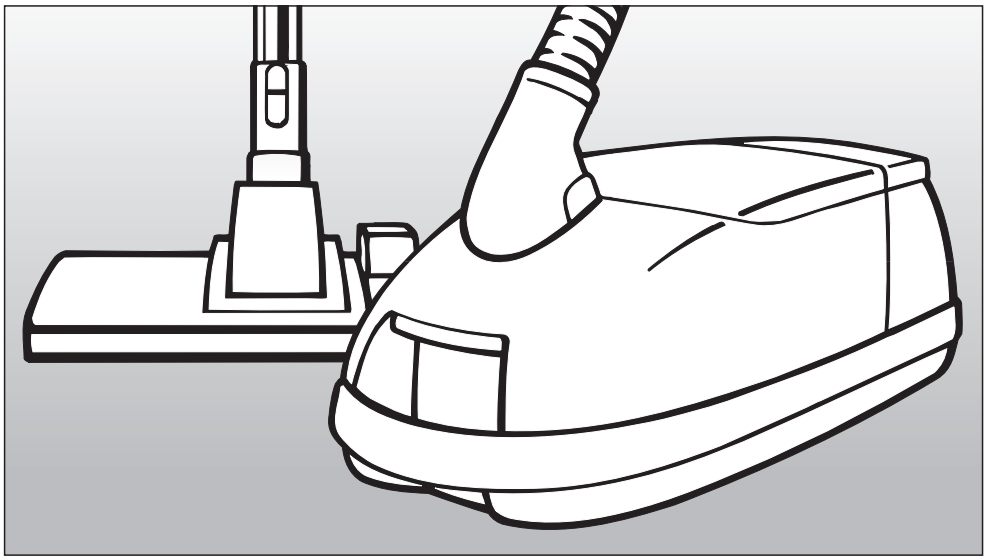

Vacuum cleaner
S 300i - S 318i

To prevent accidents
and machine damage,
read these instructions
before installation and use.

HS01

USA CDN

M.-Nr. 05 907 720

Contents

IMPORTANT SAFETY INSTRUCTIONS . . . 3
CONSIGNES DE SÉCURITÉ . . . 7
Guide to the machine . . . 12
Before using the vacuum cleaner . . . 14
Included accessories . . . 17
Using the included accessories . . . 18
Crevice nozzle . . . 18
Crevice nozzle extension . . . 18
Dusting brush . . . 19
Upholstery nozzle . . . 19
Operation . . . 20
Power cord . . . 20
Turning the vacuum on and off . . . 21
Adjusting the suction . . . 22
Opening the air inlet valve . . . 22
Park-System . . . 23
Transport and storage . . . 23
Maintenance and care . . . 24
When to change the dustbag . . . 24
Where to purchase new dustbags and filters . . . 25
When to replace the dustbag and filters . . . 25
Replacing the dustbag . . . 26
Changing the thread catcher . . . 29
Cleaning and care . . . 30
Frequently asked questions . . . 31
Technical Service . . . 32
Optional accessories . . . 33
Caring for the environment . . . 39

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING-

To reduce the risk of fire, electric shock or injury:

Before using

- Check the voltage rating of the vacuum cleaner before connecting the power cord to an electrical outlet. Your power source should correspond with the voltage rating plate located on the underside of the vacuum. Use only household AC outlets. Never use DC power sources. If you are not sure of your home's voltage supply, consult a qualified electrician. Connecting the vacuum cleaner to a higher voltage than indicated in these instructions may result in damage to the vacuum cleaner or injury.

- To reduce the the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other.) This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way.

- A damaged vacuum cleaner can be dangerous. Check the packaging, the vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance.

- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors or submerged in water, bring it to a service center.

Preview Limit Reached! To view more of this manual, please visit:
http://freemanualdownload.com/Miele-S-300I-free-manual-download